179 GPM Suction Flow Installation Instructions

Packaging and Installation Instructions - SAVE INSTRUCTIONS

Instructions

- 1. For multiple drain use only in self-contained factory manufactured spas.
- 2. Do not try to locate suction outlets on seating areas or on the brackets for such seating areas.
- 3. When two or more suction fittings are used on a common suction line they shall be separated by a minimum of 3 ft. (91.44 cm); or, if any are located closer they shall be located on two different planes (i.e., one each on two separate vertical walls). Confirm with local and national codes and standards for proper installation.
- 4. In the event of one suction outlet being completely blocked, the remaining suction outlets serving that system shall have a flow rating capable of the full flow of the pump(s) for the specific suction system.
- 5. Maximum flow rating with head loss curve: 179 GPM without vacuum tube.
- 6. Acceptable connecting pipe size(s) maximum 2.5" dia.
- 7. Mounting position: wall only
- 8. Suction outlet part number 30240U applicable.
- 9. Part numbers for 179 GPM configuration: (Replace within seven installed years)

30240U-XX VGB 2008 256 / 179 GPM suction cover & Screw/UV

30241 VGB 2008 179 GPM wall fitting x 2"S

30248 VGB 2008 179 GPM wall fitting x 2.5"S

30234-V Suction L gasket use 3.75" hole size

30236-V Suction flat gasket use 3.63" hole

30238-V Compensating ring

30239-V Suction nut

- 10. Tools required: Philips screw driver, glue for plumbing connections, clamp & pliers for tubing connections.
- 11. Service and winterizing instructions.
 - a. Service remove screw. Remove cover. Place suction cover on wall fitting with blank portion, no holes pointed down. The keyway on inside cover must match the notch on the wall fitting. Insert stainless steel screw in cover and tighten securely. Do not overtighten (as plastic will strip).
 - b. Winterizing Drain suction line thoroughly and blow out all remaining water. See spa manufacturer instructions for winterizing.
- 12. WARNING: Do not exceed the maximum allowable flow rate stated on the suction fitting.
- 13. The suction fitting including fasteners should be observed for damage or tampering before each use of this facility.
 Note: The suction fitting including fasteners should be observed for damage or tampering before each use of this facility.
 Missing, broken, or cracked suction fittings shall be replaced before using this facility. Loose suction fittings shall be reattached or replaced before using this facility. Read, then keep these instructions for future reference.

Caution: Be aware that changing pump types and sizes can increase flow rate. The maximum flow rate is 179 GPM without a vacuum tube.




179 GPM Suction Installation Instructions

Step One

Do not locate suction outlets on seating areas or on the brackets for such areas.

Step Two

Cut a 3.5' hole into the spa wall for a flat gasket. Cut a 3.63' hole into the spa wall for a L gasket.




Step Three

Back face the backside of the wall as necessary so that it is parallel to the front side of the wall.



Step Four

Place gasket on 179 GPM wall fitting 30241 (2.5"S) or 30248 (2.5"S)



Step Five

Place 179 GPM wall fitting 30241 (2"S) or 30248 (2.5"S) through the hole.



Step Six

Orient the tab down / Note wording "INSTALL ARROW UP."


Step Seven

Place the compensating ring on the wall fitting with the flat side against the wall.



Step Eight

Thread nut onto the wall fitting

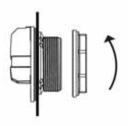

Step Nine

Tighten nut securely

Step Ten

Insert stainless steel screw in cover and tighten securely. (Do not over-tighten plastic will strip).

